



CK3000 EVOLUTION and MK6000 CONNECTION DIAGRAM

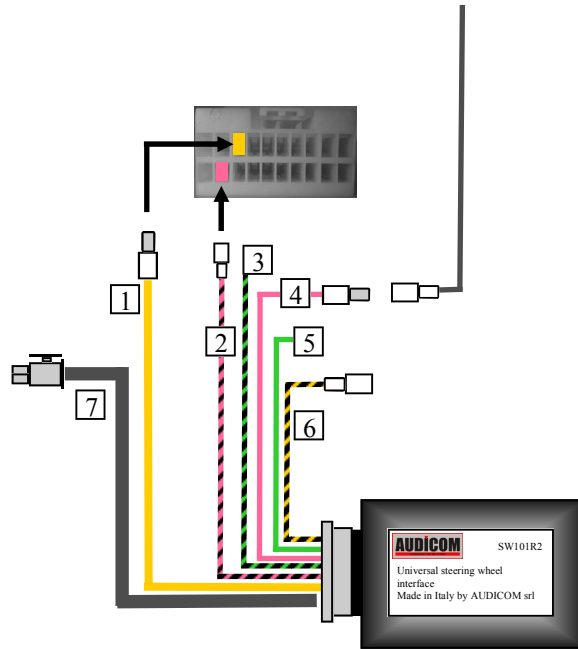

CABLES COLOURS SW101R2

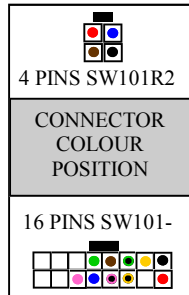

- 1 Yellow = Connect to the car radio MUTE cable
- 2 PINK/BLACK = Connect to the car radio BUS line
- 3 GREEN /BLACK = Do not connect
- 4 PINK = Connect to the car BUS line
- 5 GREEN = Do not connect
- 6 YELLOW/BLACK= Connect to the car kit MUTE cable (yellow)
- 7 To the Car kit

TECHNICAL NOTES

“BUS” CONNECTION

The BUS line wire is placed in the main 20 pin connector, position 2 from the left of the lower bank.

Cut at a distance of 5 cm from the connector, the wire coming out from pin 2 of the radio 20 pins connector, end it with an ASIA MALE faston and connect it to the unit SW101R2 PINK/BLACK wire.

End with an ASIA FEMALE faston the 2 pins wire coming out from the car system, previously cut, and connect it to the unit SW101R2 PINK wire.


MUTE CABLE CONNECTION

The MUTE cable is placed in the main 20 pins connector, position 3 from the left of the upper bank. Connect to this wire without cutting it off, to the yellow wire coming out from the unit SW101R2.

To avoid the passages above described, it is possible to buy a dedicated plug ‘n’ play harness:

CPI131M

SWITCHES PROGRAMMING DIAGRAM for FIAT SEDICI



CK3000 evo



MK6000



DEDICATED HARNESSES FOR PLUG “N” PLAY INSTALLATION

CPI131M

HARNESS WITH BUS AND MUTE WIRES FOR FIAT SEDICI FROM YEAR 2006